

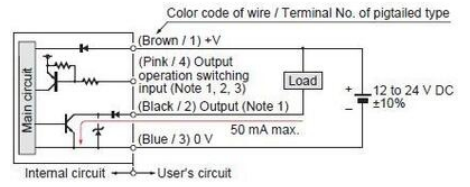
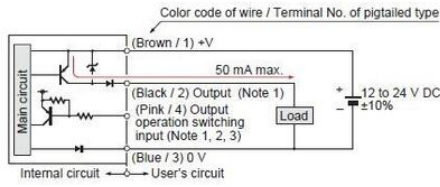


EX-L291(-P) EX-L221(-P) Sensor

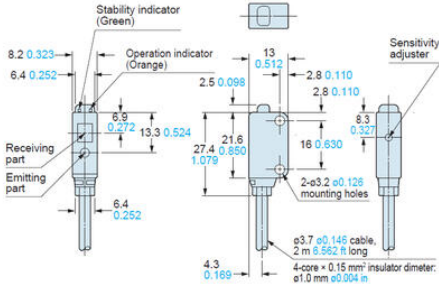


EX-L21□

EX-L22□

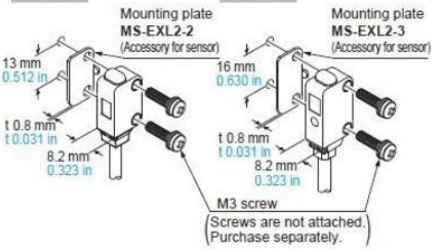


EX-L211(-P) EX-L212(-P) Sensor

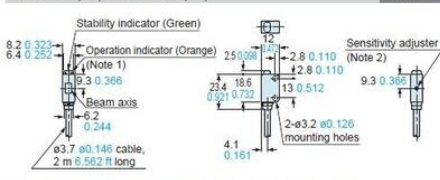

Notes: 1) It is the laser radiation indicator (green) on the emitter.
2) It is incorporated in EX-L211(-P) only.

EX-L211(-P)-J EX-L212(-P)-J Sensor

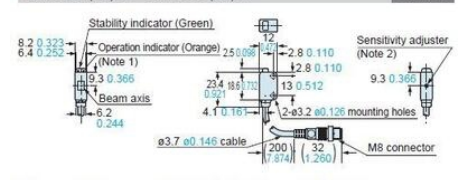

Notes: 1) It is the laser radiation indicator (green) on the emitter.
2) It is incorporated in EX-L211(-P)-J only.

EX-L291(-P) EX-L221(-P) Sensor

